

**Differential temperature controller for solar, heating & air conditioning systems**

## **Manual for the specialised craftsman**

Mounting

Connection

Operation

Troubleshooting



48000190

Thank you for buying this RESOL product.  
Please read this manual carefully to get the best performance from this unit.  
Please keep this manual safe.

en

Manual

[www.resol.com](http://www.resol.com)

## Safety advice

Please pay attention to the following safety advice in order to avoid danger and damage to people and property.

## Instructions

Attention must be paid to the valid local standards, regulations and directives!

## Information about the product

### Proper usage

The differential temperature controller is designed for electronically controlling solar, heating and air conditioning systems in compliance with the technical data specified in this manual.

Improper use excludes all liability claims.

### CE Declaration of conformity

The product complies with the relevant directives and is therefore labelled with the CE mark. The Declaration of Conformity is available upon request, please contact the manufacturer.



#### Note

Strong electromagnetic fields can impair the function of the controller.

- Make sure the controller as well as the system are not exposed to strong electromagnetic fields.

**Subject to technical change. Errors excepted.**

## Target group

These instructions are exclusively addressed to authorised skilled personnel. Only qualified electricians should carry out electrical works. Initial installation must be effected by the system owner or qualified personnel named by the system owner.

## Description of symbols

**WARNING!** Warnings are indicated with a warning triangle!



→ They contain information on how to avoid the danger described.

Signal words describe the danger that may occur, when it is not avoided.

- **WARNING** means that injury, possibly life-threatening injury, can occur.
- **ATTENTION** means that damage to the appliance can occur.



#### Note

Notes are indicated with an information symbol.

- Arrows indicate instruction steps that should be carried out.

## Disposal

- Dispose of the packaging in an environmentally sound manner.
- At the end of its working life, the product must not be disposed of as urban waste. Old appliances must be disposed of by an authorised body in an environmentally sound manner. Upon request we will take back your old appliances bought from us and guarantee an environmentally sound disposal of the devices




## Differential temperature controller *DeltaSol*® A

The *DeltaSol*® A controller is the simplest solution for all differential controls. It is equipped with an adjustable temperature difference and an antifreeze function which can be activated/ deactivated with a jumper.

The enclosed silicone sealing cord guarantees a protection against dripping water.

### Contents

<b>1 Overview</b> .....	<b>4</b>
<b>2 Installation</b> .....	<b>4</b>
2.1 Mounting .....	4
2.2 Electrical connection .....	6
<b>3 Operation and function</b> .....	<b>6</b>
3.1 Flashing codes .....	6
3.2 Jumper and potentiometer .....	6
3.3 Switch-on temperature difference .....	7
3.4 Antifreeze function .....	7
<b>4 Application examples</b> .....	<b>7</b>
4.1 Standard solar system with 1 store .....	7
4.2 Heating circuit return preheating .....	8
4.3 Heat exchange control .....	8
<b>5 Accessories</b> .....	<b>9</b>
<b>6 Troubleshooting</b> .....	<b>9</b>

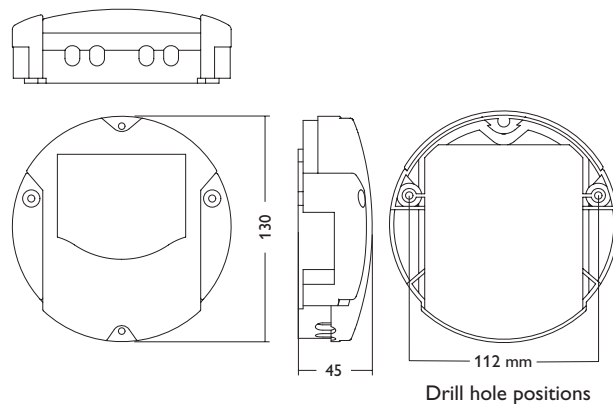

## 1 Overview

- Adjustable temperature difference 2... 16 K, hysteresis 1.6 K
- Antifreeze function adjustable by jumper
- Protection against dripping water

### Technical data

**Inputs:** 2 Pt1000 temperature sensors

**Outputs:** 1 electromechanical relay (changeover)

**Switching capacity:** 4 (1) A 240 V~ (electromechanical relay)

**Total switching capacity:** 4 A 240 V~

**Power supply:** 220... 240 V~ (50... 60 Hz)

**Supply connection:** type Y attachment

**Standby:** 1,35 W

**Mode of operation:** Type 1.B

**Rated impulse voltage:** 2.5 kV

**Functions:** antifreeze function

**Housing:** plastic, PC-ABS and PMMA

**Mounting:** wall mounting

**Indication/Display:** 1 operating control LED

**Operation:** 1 potentiometer and 1 jumper

**Protection type:** IP 20 / DIN EN 60529 (with IP 22 sealing)

**Protection class:** II

**Ambient temperature:** 0... 40 °C

**Degree of pollution:** 2

**Dimensions:** Ø 139 mm, depth 45 mm

## 2 Installation

### 2.1 Mounting

#### **WARNING!** Electric shock!



Upon opening the housing, live parts are exposed!

→ **Always disconnect the device from power supply before opening the housing!**



#### **Note:**

Strong electromagnetic fields can impair the function of the controller.


→ Make sure the controller as well as the system are not exposed to strong electromagnetic fields.

The unit must only be located in dry interior rooms.

The controller must additionally be supplied from a double pole switch with contact gap of at least 3 mm.

Please pay attention to separate routing of sensor cables and power supply cables.

In order to mount the device to the wall, carry out the following steps:

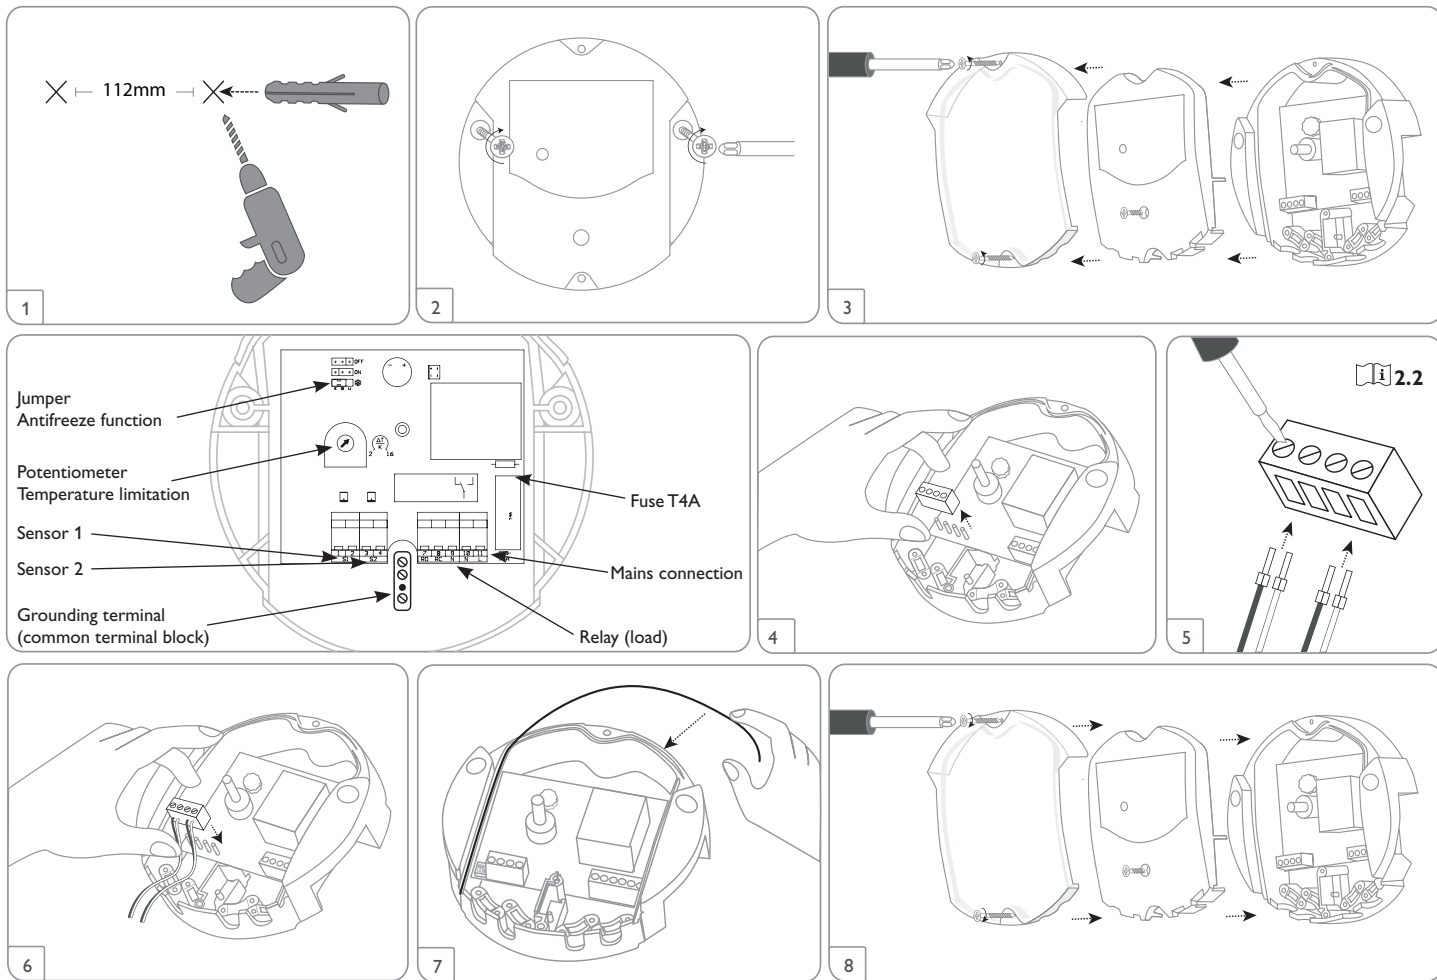

## 2.2 Electrical connection

### WARNING! Electric shock!



Upon opening the housing, live parts are exposed!

→ **Always disconnect the device from power supply before opening the housing!**

### ATTENTION! ESD damage!



Electrostatic discharge can lead to damage to electronic components!

→ **Take care to discharge properly before touching the inside of the device! To do so, touch a grounded surface such as a radiator or tap!**



#### Note

Connecting the device to the power supply must always be the last step of the installation!



#### Note

It must be possible to disconnect the device from the mains at any time.

- Install the mains plug such that it is accessible at any time.
- If this is not possible, install a switch that can be accessed.

### Do not use the device if it is visibly damaged!

The controller is supplied with power via a mains cable. The power supply of the device must be 220 ... 240 V~ (50 ... 60 Hz).

The controller is equipped with 1 electromechanical relay to which a load such as a pump, a valve, etc. can be connected.

Relay 1

- 7 = Normally open contact (RO)
- 8 = Normally closed contact (RC)
- 9 = Neutral conductor N

Grounding terminal (common terminal block)

The **mains connection** is at the terminals:

- 10 = Neutral conductor N
- 11 = Conductor L

Grounding terminal (common terminal block)

Connect the **temperature sensors** (S1 and S2) to the following terminals with either polarity:

1/2 = Sensor 1 (e. g. collector sensor)

3/4 = Sensor 2 (e. g. store sensor)


## 3 Operation and function

### 3.1 Flashing codes

The operating control LED indicates the current status of the controller.

Colour	Permanent	Flashing
Green	Relay on	Antifreeze function


### 3.2 Jumper and potentiometer

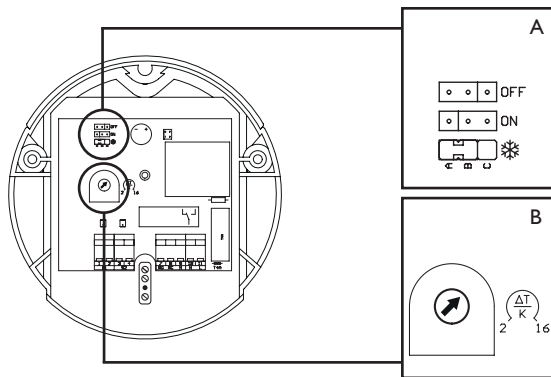

The jumper (A) can be used for activating or deactivating the antifreeze function.

With the potentiometer (B), the switch-on temperature difference can be adjusted (in K).

### 3.3 Switch-on temperature difference

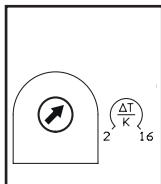


The controller calculates the temperature difference between the temperature sensors S1 and S2. If the difference is larger than or identical to the adjusted nominal value, the relay will be switched on. The operating control LED flashes green. If the temperature difference falls by 1.6 K (non-adjustable hysteresis) below the nominal value, the relay will be switched off.

Adjustment range: 2 ... 16 K

Factory setting: 6 K

### 3.4 Antifreeze function

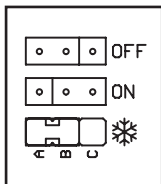

The antifreeze function activates the loading circuit between the collector and the store when the collector temperature falls below +4 °C. This will protect the fluid against freezing or coagulating. If the temperature measured at S1 reaches +5 °C, the pump will be switched off. If the antifreeze function is active, the operating control LED flashes green.

Deactivated by default



#### Note

Since this function uses the limited heat quantity of the store, the antifreeze function should be used in regions with few days of temperatures around the freezing point.

## 4 Application examples


### 4.1 Standard solar system with 1 store

The controller calculates the temperature difference between collector sensor S1 and store sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference, the pump (R1) will be switched on and the store will be loaded. If the difference falls by 1.6 K (non-adjustable hysteresis) below the adjusted temperature difference, the pump will be switched off.

S1 = Collector sensor

S2 = Store sensor

RO = Solar pump

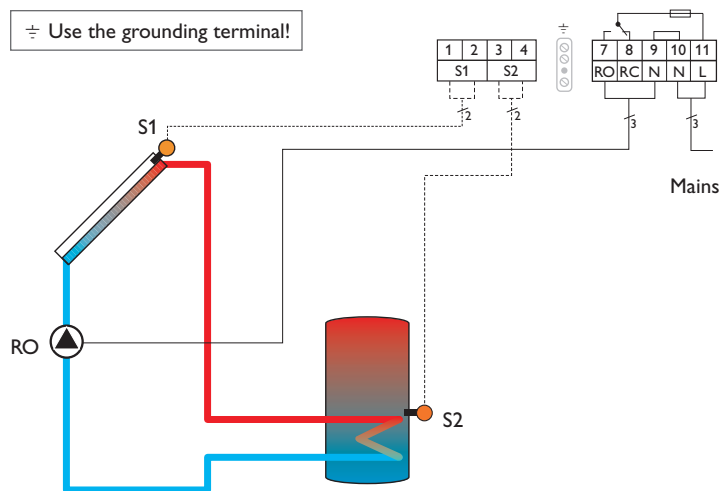


## 4.2 Heating circuit return preheating

The controller calculates the temperature difference between store sensor S1 and heating circuit return sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference, the controller switches the 3-port valve. The heat of the store is used for increasing the return temperature of the heating circuit. If the difference falls by 1.6 K (non-adjustable hysteresis) below the adjusted temperature difference, the valve will be put into its initial position.

S1 = Store sensor

S2 = Heating circuit return sensor

RO = 3-port valve

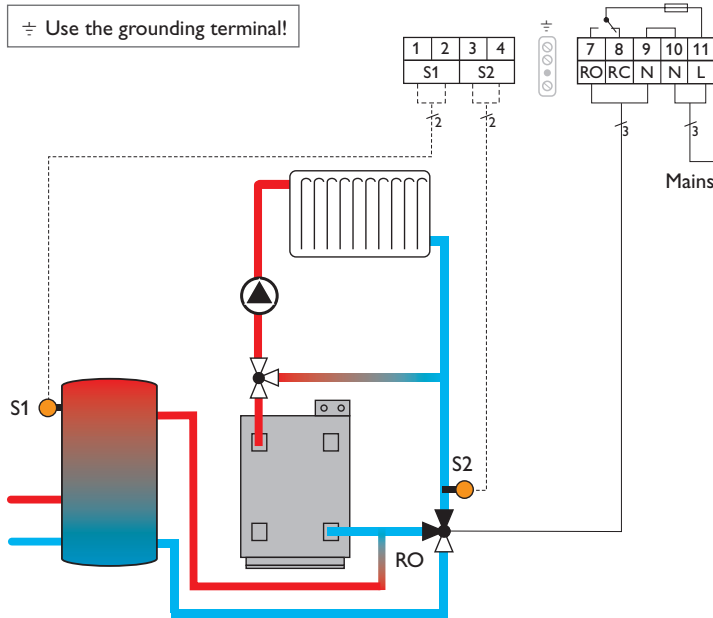


## 4.3 Heat exchange control

When the temperature difference between sensor 1 (store 1) and sensor 2 (store 2) exceeds the adjusted value, the circulating pump will be activated. Heat will be transferred from store 1 into store 2. If the difference falls by 1.6 K (non-adjustable hysteresis) below the adjusted temperature difference, the pump will be switched off.

S1 = Store sensor 1

S2 = Store sensor 2

RO = Circulating pump

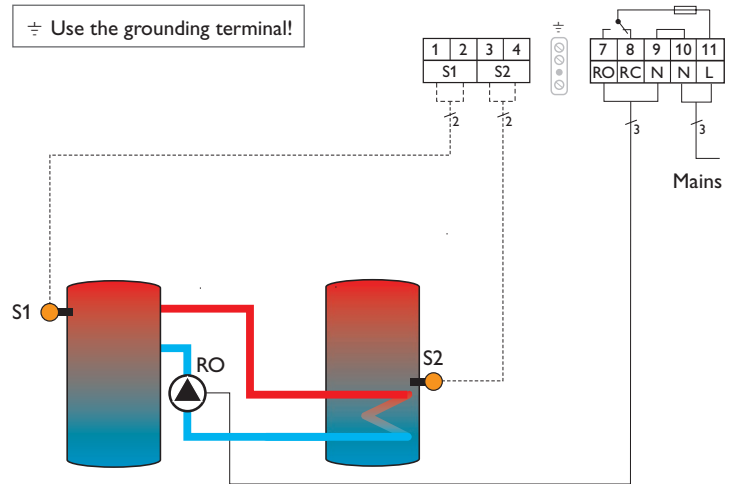



## 5 Accessories



SP10 Overvoltage protection device    HR230 Auxiliary relay

## 6 Troubleshooting



Spare fuse (inside the cover)

In the case of an error, please check the following:

Check the power supply of the controller. Is it disconnected?

no

The fuse of the controller could be blown. The fuse becomes accessible when the cover is removed. The fuse can then be replaced.

yes

Check the supply line and reconnect it.

Disconnected temperature sensors can be checked with an ohmmeter. Please check if the resistance values correspond with the table.

°C	°F	Ω Pt1000	°C	°F	Ω Pt1000
-10	14	961	55	131	1213
-5	23	980	60	140	1232
0	32	1000	65	149	1252
5	41	1019	70	158	1271
10	50	1039	75	167	1290
15	59	1058	80	176	1309
20	68	1078	85	185	1328
25	77	1097	90	194	1347
30	86	1117	95	203	1366
35	95	1136	100	212	1385
40	104	1155	105	221	1404
45	113	1175	110	230	1423
50	122	1194	115	239	1442

Resistance values of Pt1000 sensors



### Note:

For answers to frequently asked questions (FAQ) see [www.resol.com](http://www.resol.com).





Distributed by:

**RESOL – Elektronische Regelungen GmbH**

Heiskampstraße 10  
45527 Hattingen / Germany

Tel.: +49 (0) 23 24 / 96 48 - 0

Fax: +49 (0) 23 24 / 96 48 - 755

[www.resol.com](http://www.resol.com)

[info@resol.com](mailto:info@resol.com)

**Important note**

The texts and drawings in this manual are correct to the best of our knowledge. As faults can never be excluded, please note:

Your own calculations and plans, under consideration of the current standards and directions should only be basis for your projects. We do not offer a guarantee for the completeness of the drawings and texts of this manual - they only represent some examples. They can only be used at your own risk. No liability is assumed for incorrect, incomplete or false information and/or the resulting damages.

**Note**

The design and the specifications can be changed without notice.  
The illustrations may differ from the original product.

**Imprint**

This mounting- and operation manual including all parts is copyrighted. Another use outside the copyright requires the approval of RESOL – Elektronische Regelungen GmbH. This especially applies for copies, translations, micro films and the storage into electronic systems.

© **RESOL – Elektronische Regelungen GmbH**